

Step1.

Install the hose kid for master cylinder through the bike frame.

**Step2.**

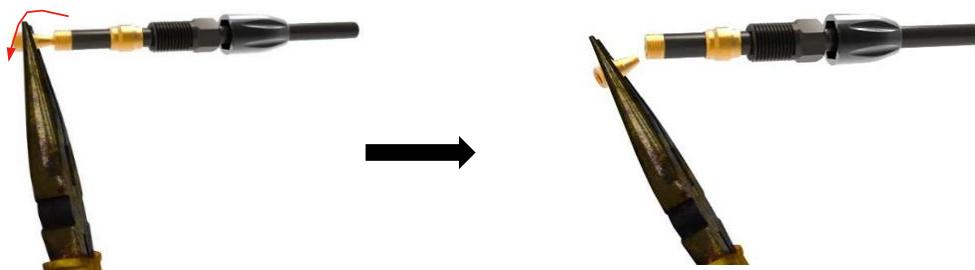
Assemble parts 1.2.3 in this order.

**Step3.**

Unscrew the bleeding nut. (Note: keep screw hole up to prevent oil from spilling)

**Step4.**

Cut off the front of connector by using sharp-nose pliers and connect with the master cylinder in the upwards position, to prevent oil from spilling.

**Step5.**

Hold the hose kit and press it equally while fixing. (Note: keep pressing to fix it in place, tightening torque at 70kg/cm)

**Step6.**

Fix the lever (master cylinder) on the handlebar, and complete the setup using a comfortable position.